



REPTIBREEZE™ IGUANARIUM®

INSTRUCTIONS

Congratulations on your purchase of Zoo Med's REPTIBREEZE™ IGUANARIUM. The following instructions will assist you with the proper assembly of your new habitat. Please read the following instructions carefully prior to assembly. If you have any questions regarding these instructions or the proper use of this item, please contact our customer service department zoomed@zoomed.com or by calling (888) 496-6633 (US and Canada only). Customers in other countries, please call (805) 542-9988.

Your new REPTIBREEZE™ IGUANARIUM® includes the following components (see fig. 1):


| QTY. | ITEM |
|------|-------------------------------------|
| 1 | Back panel |
| 1 | Upper front panel with door |
| 1 | Top panel with door |
| 2 | Left and right side panels |
| 1 | Lower Front Panel |
| 1 | Bottom Tray with caster brackets |
| 1 | Basking Shelf |
| 4 | Caster wheels |
| 8 | Angle brackets |
| 32 | Screws and nuts for corner brackets |
| 22 | Panel assembly screws (Black) |

TOOLS REQUIRED:

- Phillips screwdriver with #2 tip.
- Adjustable wrench.

ASSEMBLY TIPS:


- Prior to assembly, check to make sure that there are no missing pieces.
- Do not over-tighten the screws to avoid stripping the holes in the cage.
- For ease of assembly, assemble the panels in the order listed below. Be sure to match up the corresponding letters for each panel during assembly.

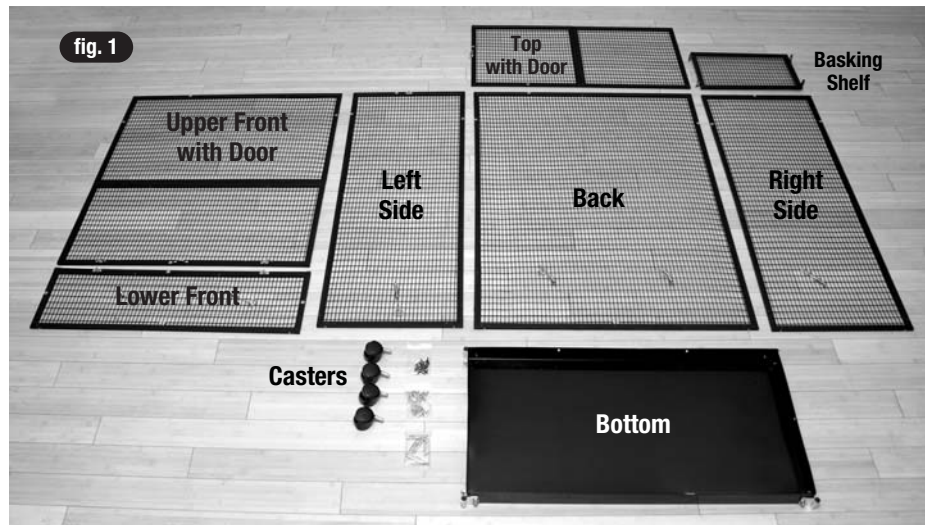

ASSEMBLY:


1. Attach SIDE PANELS to BACK PANEL (see fig. 2): Stand the back panel on its bottom edge with side "A" up. Attach the left and right side panels to the back panel using the black panel assembly screws. Be sure to match the letters B and C on the back panel to the corresponding letters on the side panels. **Note:** The panel label stickers should face "out" as shown in the photos.

2. Attach LOWER FRONT PANEL to SIDE PANELS (see fig. 3): Place the lower front panel between the side panels as shown, matching the letters E and D on the lower front panel to the corresponding letters on the side panels. The door latch brackets should face out and are located on the top edge. Screw the panels together using the black panel assembly screws.

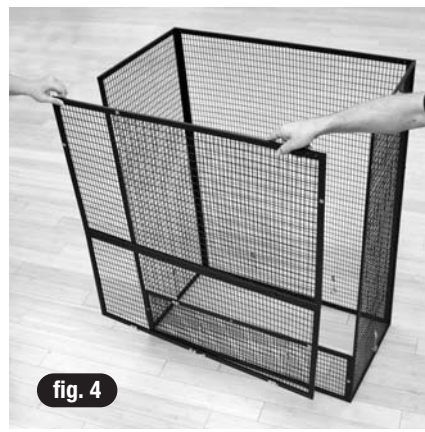

3. Attach the UPPER FRONT PANEL WITH DOOR to SIDE PANELS (see fig. 4):



Place the upper front panel with door between the two side panels as shown. The letters E and D on the upper front panel should match the corresponding letters on the side panels. Secure the latches on the door to the door latch brackets on the lower front panel.

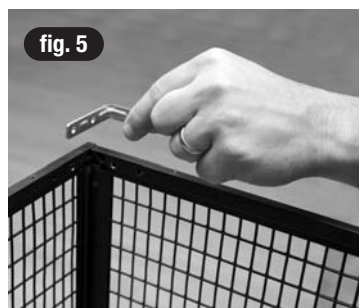

4. Install the ANGLE BRACKETS in the upper and lower corners (see fig. 5 and 6): Attach the angle brackets to the upper and lower corners of the IGUANARIUM. First, install brackets in the upper four corners. Then, flip the cage over and install the remaining brackets in the bottom four corners. Each bracket is secured with four screws and four nuts. When finished, turn the cage back over to the upright position.

ASSEMBLY (cont.):



5. Install the BASKING SHELF (see fig. 7 and 8): To install the basking shelf, insert it into the cage at an angle through the opening in the top. Attach the two brackets along one edge of the shelf to the cage at the desired height. Make sure that the brackets are securely clipped to the wire as shown. Then, lower the opposite side of the shelf and attach the remaining two clips.

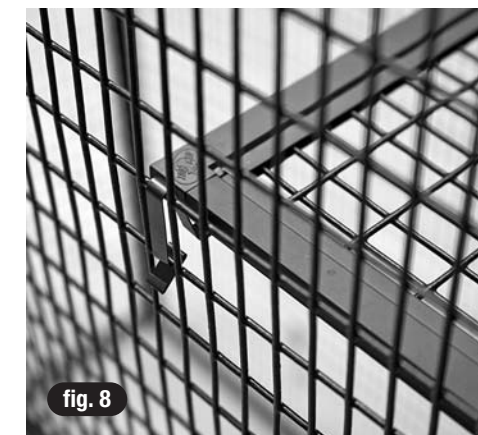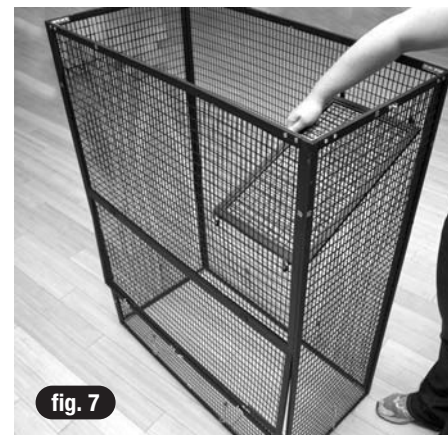

6. Attach the TOP PANEL WITH DOOR (see fig. 9): Rest the top panel on the cage, aligning letters A, F, G, and H. Screw the top panel to the cage using the black panel screws. Secure the top door using the latch.



7. Attach CASTERS (see fig. 10): Attach the four casters to the caster brackets on the bottom tray by inserting the casters into the holes of the brackets.

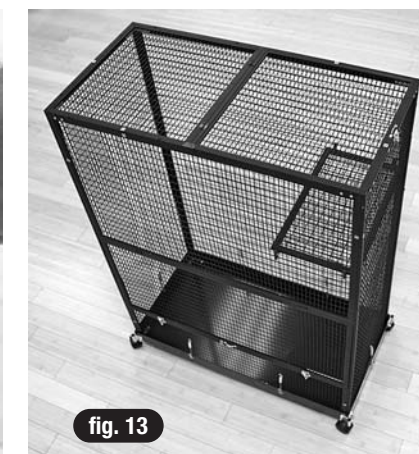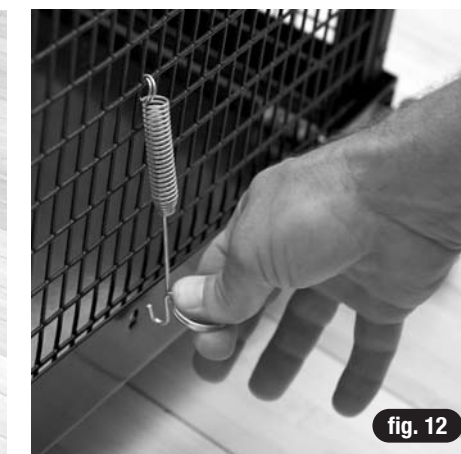

8. Attach the cage assembly to the BOTTOM TRAY (see fig. 11, 12 and 13): Place the cage assembly on the bottom tray and attach the spring clips onto the bottom tray as shown. Remove the panel identification stickers. Your REPTIBREEZE IGUANARIUM is now assembled and ready to use!



ZOO MED LABORATORIES, INC.
3650 Sacramento Dr. Phone: 805-542-9988
San Luis Obispo, CA 93401 U.S.A. E-mail: zoomed@zoomed.com

www.zoomed.com