


INSTRUCTIONS for FS-CN

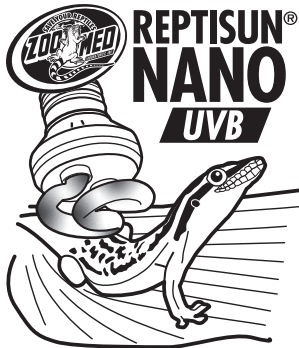

INSTRUCTIONS:

Congratulations on your purchase of Zoo Med's ReptiSun® NANO UVB lamp; your reptiles will thank you! The following instructions will assist you in determining the correct set up for your specific application.

Use your ReptiSun® NANO UVB in terrariums 10 gallons or smaller. Ideal for use in Zoo Med's Naturalistic Terrarium® (NT-1, NT-2) or Zoo Med's Creatures Habitat (CT-3). The specific UVB requirements of the species you are caring for will determine the correct distance of the lamp to your reptile's basking site. Use the following descriptions and chart to determine the correct set up for your reptile.

ZONE	DISTANCE FROM BULB	WHAT ANIMALS LIVE IN THIS ZONE?
/	<2"	DANGER - Animals should NOT have access to this zone
4	2-4"	Mid-day Baskers
3	4-7"	Mostly Full Sun - Occasional Partial Sun
2	7-8"	Mostly partial sun - occasional full sun
1	8-10"	Shade dwelling and crepuscular species

PLACEMENT OVER TERRARIUM:

Securely suspend the Nano Dome Lamp Fixture with NANO UVB installed above your terrarium's screen cover in a place out of reach of children and pets. Zoo Med's Reptile Lamp Stand (LF-21) increases safety and security by providing a strong and stable means for suspending your UVB lamp.

COVERS:

Screen covers on terrariums reduce the amount of UVB that reaches your reptile's basking site. As the screen mesh gets finer, more UVB is blocked or filtered. **CAUTION:** Be sure that the lamp fixture is securely suspended above the enclosure in a manner that will prevent the fixture from falling into the enclosure.

LAMP FIXTURES AND APPLICATIONS:

This lamp is designed for use in Zoo Med's Nano Dome Fixtures (single dome LF-35 and combo dome LF-36).

NOTES ON OPERATING RANGE:

The operating range is the distance from the lamp to the reptile's basking site. In order for your reptile to benefit from the UVB, you must also provide your reptile with the appropriate temperature zone. Be sure to provide an appropriate temperature and UVB gradient. This will allow your reptile to adjust their distance to heat and UVB lamps in order to self-regulate their body temperature and UVB exposure. **CAUTION:** Always have your lamp at least two inches away from your reptiles. Visit Zoo Med's Care and Education Center at the following link for more information on your animal's UVB requirements (<https://zoomed.com/care-education-center/>).

Caution: The ReptiSun® NANO UVB lamp emits UV radiation and must be used in accordance with these instructions. Just as you would not stare into the sun, do not stare into this lamp! This lamp must be placed directly overhead of your reptiles, and not to the side which would force them to stare into the lamp. Failure to use this lamp according to these instructions may result in personal injury or may cause injury to your reptile(s). Lamp is intended for indoor use only, and reptile use only.

WHEN TO REPLACE YOUR LAMP:

Your lamp will provide beneficial UVB for a period of 12 months. After 12 months, the ReptiSun® NANO UVB lamp should be replaced with a new ReptiSun® NANO UVB lamp. Before you turn your lamp on for the first time, date the base of the lamp to remind yourself when to replace it. Go to www.zoomed.com and click 'UVB Reminder' to receive an email from Zoo Med letting you know it is time to replace your lamp.

DIGITAL UVI METERS:

If you are interested in measuring the UVI that your lamp is producing, you may want to purchase Zoo Med's Digital UVI Meter (item# ST-7). This meter is available in the 'Online Store' section at www.zoomed.com, or by special order through your reptile product retailer.

WARNINGS:

- KEEP OUT OF REACH OF CHILDREN.
- Do not place inside cages or terrariums.
- Keep the ReptiSun® NANO UVB away from CURTAINS or other highly flammable objects.
- Make sure your ReptiSun® NANO UVB is securely suspended above your terrarium, or use Zoo Med's Reptile Lamp Stand for optimum attachment.
- For Indoor use only. • Save these instructions!

WARRANTY:

Zoo Med Laboratories, Inc. warrants each ReptiSun® NANO UVB to be free of defects in material and workmanship under normal use and service for a period of 12 months after purchase. Warranty is limited to repair or replacement of the product with a receipt dated within 12 months. No claim shall be allowed under this warranty if, in the opinion of Zoo Med Laboratories, Inc. the ReptiSun® NANO UVB has been subjected to accident or improper usage. This warranty is in lieu of any other obligation, liability, right or claim, whether in contact or in tort, including any right in strict liability in tort or any right arising from negligence on the part of Zoo Med Laboratories, Inc. for any direct, incidental, consequential or other damage.



LF-35 NANO DOME LAMP FIXTURE



LF-36 NANO COMBO DOME LAMP FIXTURE



LF-35C NANO DOME HOLD DOWN KIT



LF-36C NANO COMBO DOME HOLD DOWN KIT



ZOO MED LABORATORIES, INC.
3650 Sacramento Drive
San Luis Obispo, CA 93401 U.S.A.
Phone: 805-542-9988
Email: zoomed@zoomed.com

zoomed.com